

Your **HITACHI CAR RADIO**, model **TM-1081ZB** is a highly sensitive IC auto tuning car radio. Its graceful styling and superb performance make your driving more comfortable. In order that you make better use of this car radio, we ask you to read this pamphlet thoroughly.

## FEATURES

- Auto tuning
- Integrated circuit
- High sensitivity
- Large audio output
- Dial illumination

## OPERATION

### TO SWITCH ON

Push in "ON-OFF SWITCH" to switch on and pilot lamp lights. Once again push it to switch off.

### TO TUNE IN

Dial pointer will be tuned automatically to the nearest station by depressing "AUTO TUNING SWITCH."

Depress "SWITCH" repeatedly until the desired station is tuned.





Keep "SWITCH" depressed until the dial pointer comes near to the desired station. After that, release "SWITCH" and the pointer will be tuned automatically.

When the broadcast once set can not be heard well or if you want to set the switch for the other station, follow the same way as mentioned above.

As for manual tuning; turn "TUNING CONTROL," adjusting the dial pointer to the frequency of the desired station.

### HOW TO SET TUNING BUTTON FOR THE DESIRED BROADCAST

- Push in desired "TUNING BUTTON" and pull out it.
- Tune the radio exactly for the desired broadcast station by turning tuning control or depressing auto tuning switch.
- Push in the button until a snap is heard.
- Set the other buttons for the other stations respectively in the same manner as mentioned above. Now you can select the desired broadcast. When the broadcast once set can not be heard well or if you want to set the button for the other station, follow the same way mentioned above.

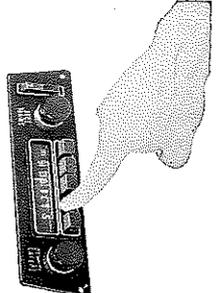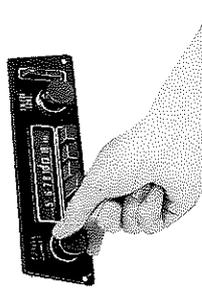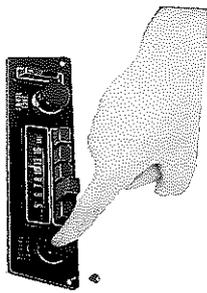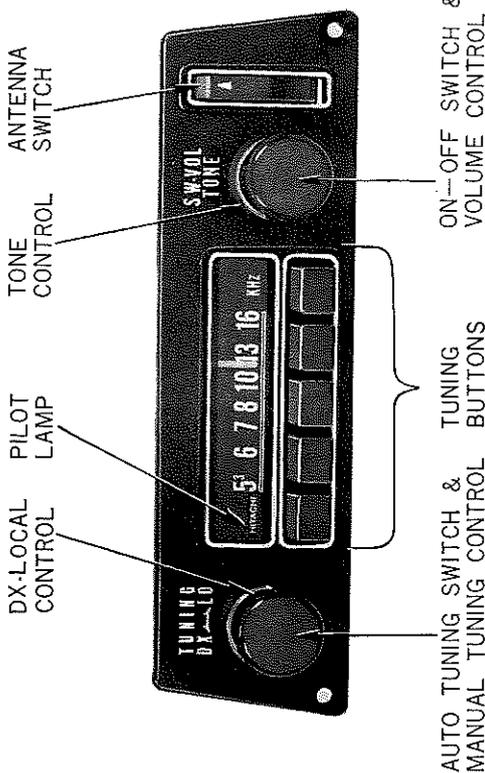

### DX-LOCAL control

Turn "DX-LOCAL CONTROL" to obtain desired sensitivity.

To receive weak signal, turn "DX-LOCAL CONTROL" counterclockwise.

To cut off weak signal to tune in station easily tune "DX-LOCAL CONTROL" clockwise.

### To adjust volume

Turn "VOLUME CONTROL" to obtain desired volume.

### To select desired tone

Turn "TONE CONTROL" to obtain desired tone.

### To up and down antenna

Push in up side (▲) of "ANTENNA SWITCH," and the antenna will go up, and release of it will stop the antenna. Push in under side of "ANTENNA SWITCH," the antenna will go down.



When the antenna is go up and go down completely antenna will stop.

However, the motor remains in operation. Accordingly, release the hand from the "ANTENNA SWITCH."

Cover is attached to the aperture of "ANTENNA SWITCH," when using lock antenna.